



Model/Modelo/Modèle
B4311LF-SD


RP44476▲
 Lever Handle w/Set Screw and Button
 Manija en Palanca con Tornillo de Ajuste y Botón
 Manette avec Vis de Calage et Bouton

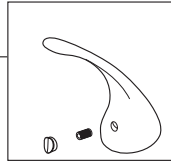


RP44123▲
 Repair Kit
 Equipo/Herramientas para reparaciones
 Kit de réparation

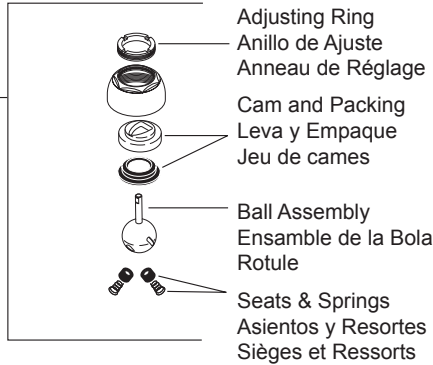

RP92442▲
 Wand Assembly
 Ensamble de la Cabeza del Rociador
 Poignée du bec

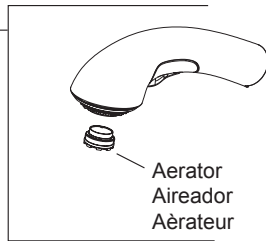

RP41122
 Hose Assembly (Includes Gasket)
 Ensamble de Manguera
 (Incluye Empaque)
 Tuyau souple (joint inclus)

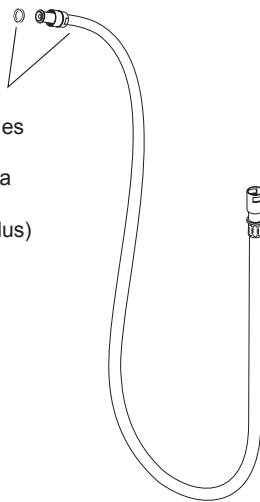


RP32522
 Clip
 Presilla
 Agrafe



RP11723
 Zinc Weights and Screws
 Pesas de Cinc y Tornillos
 Poids en plomb et vis



RP44822
 Washer (1), Nut (1) & Screws (2)
 Arandela (1), Tuerca (1) y Tornillos (2)
 Rondelle (1), Écrou (1) et Vis (2)

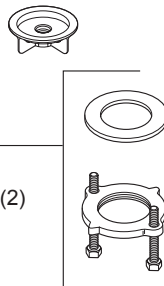

Locknuts
 Contratuercas
 Écrous de Blocage




RP5404
 Coupling Nuts
 Tuercas de Acoplamiento
 Écrous de Raccordement



Escutcheon & Gasket
 Chapetón y Empaque
 Boîtier et joint plat



O-Rings
 Anillos "O"
 Joints Toriques

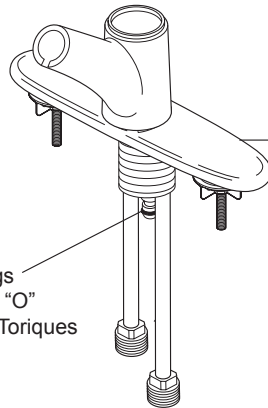

Escutcheon
 Chapetón
 Boîtier

RP44479▲
 Dispenser Assembly (complete)
 Ensamble del Surtidor (completo)
 Distributeur (complet)

