




116126

In wall shower only
rough-in







see what Delta can do™

Model
R85200-SO

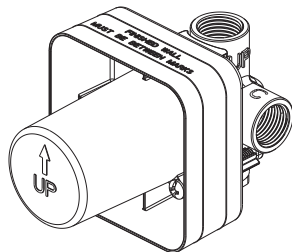


Write purchased model
number here.


You may need:

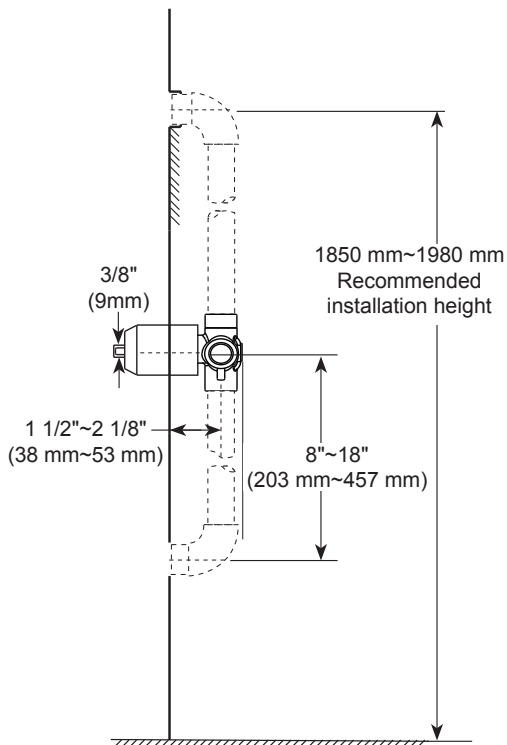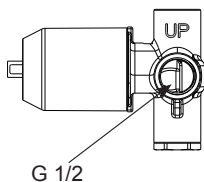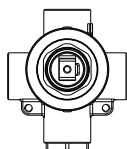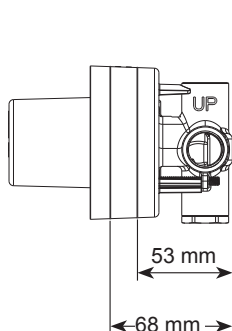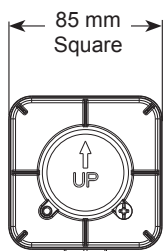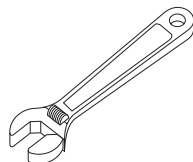


1A

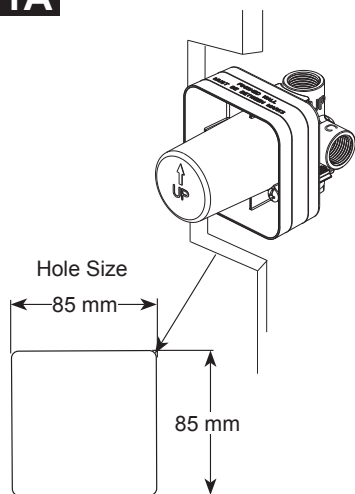

1B

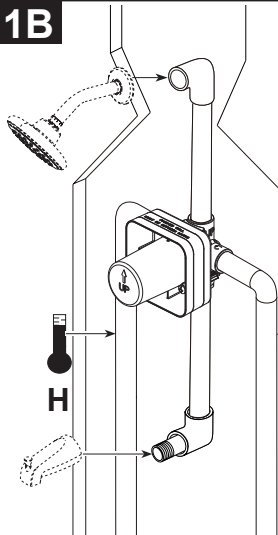


1C

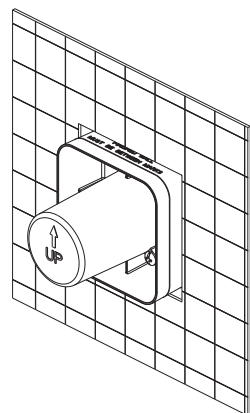


1. Install valve body and plumbing. **NOTE:** Finished wall must be between the min and max markings and plaster guard sides should flush with the surface of the finish wall.


2A

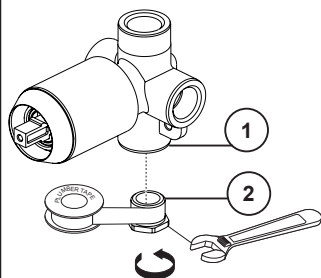


2B

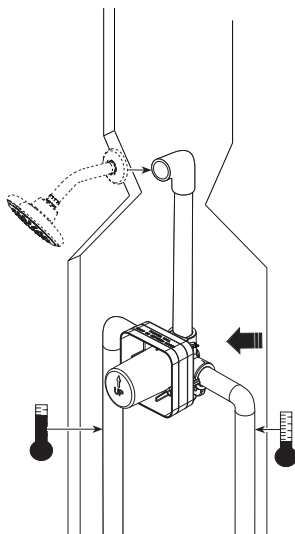


2C

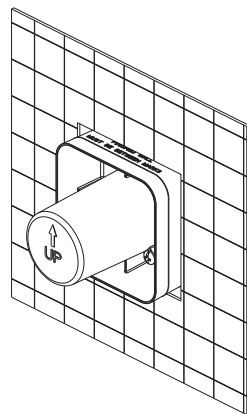


2. If you don't need to install tub spout, plug up bottom outlet (1) with plug (2) provided. Check for leaks before trim installation.

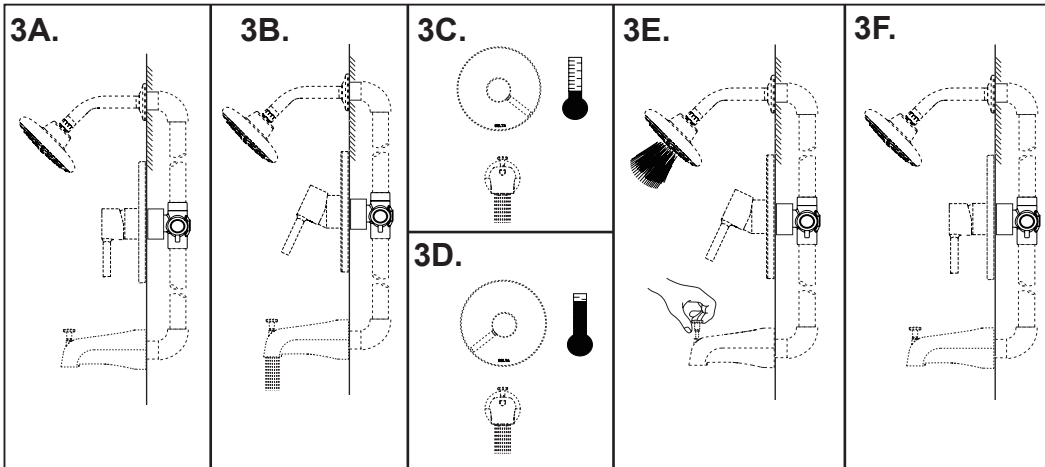

3. Check for correct operation for tub and shower.

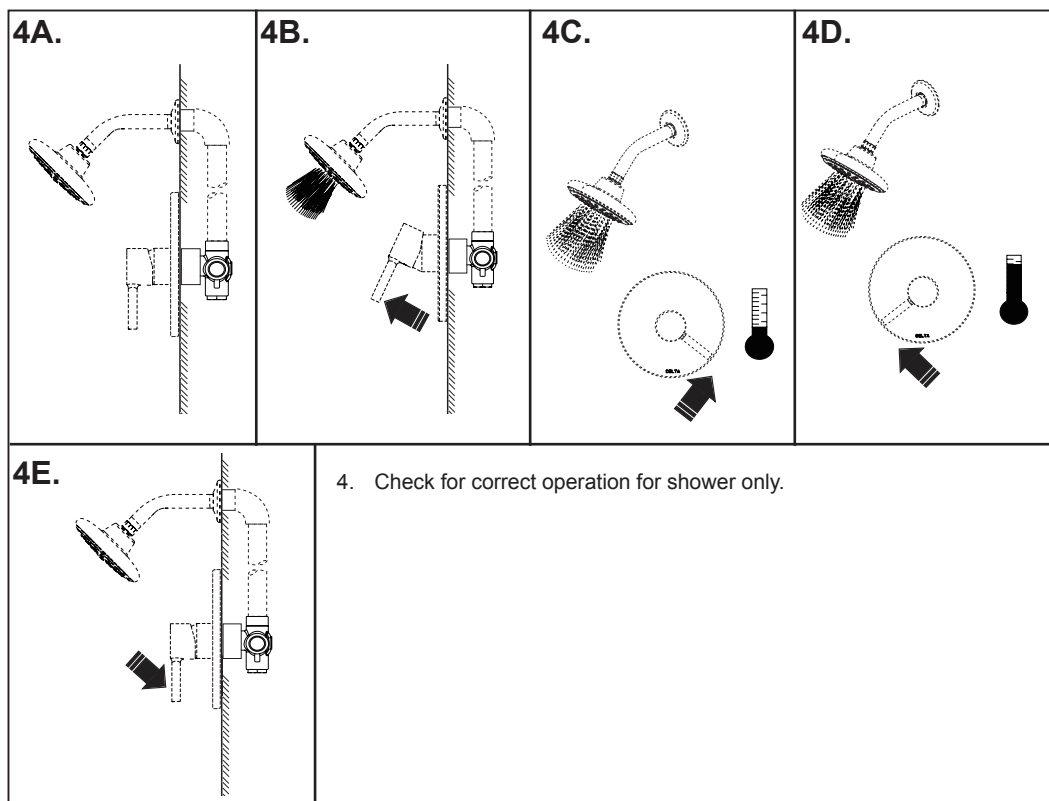

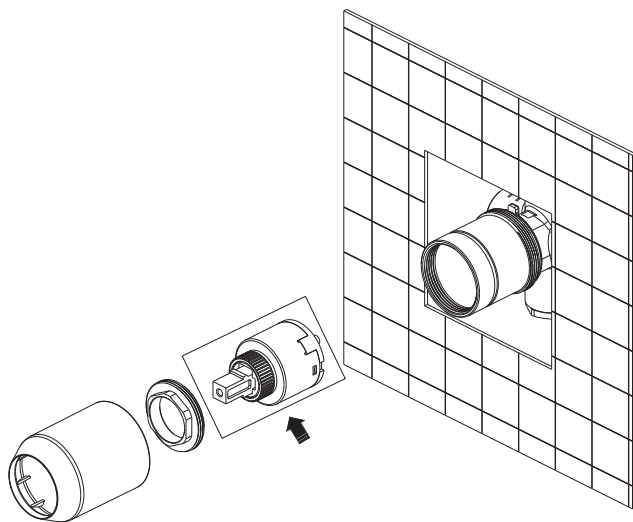

5. Replace the ceramic cartridge.