




see what Delta can do™

118167


Choice Dway® Non-Thermostatic Push Button Shower Mixer Rough with 2 Outlets

Model
R95702


Write purchased model number here.

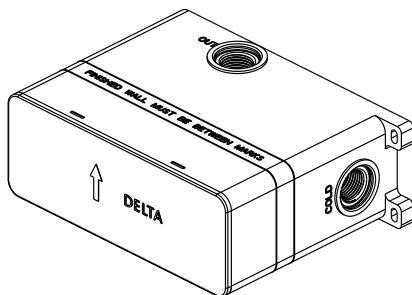


You may need:

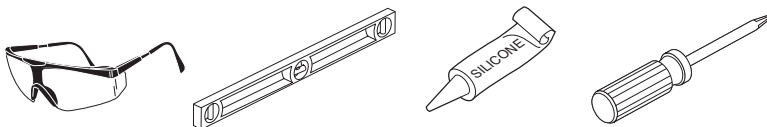

R95702
Overall size

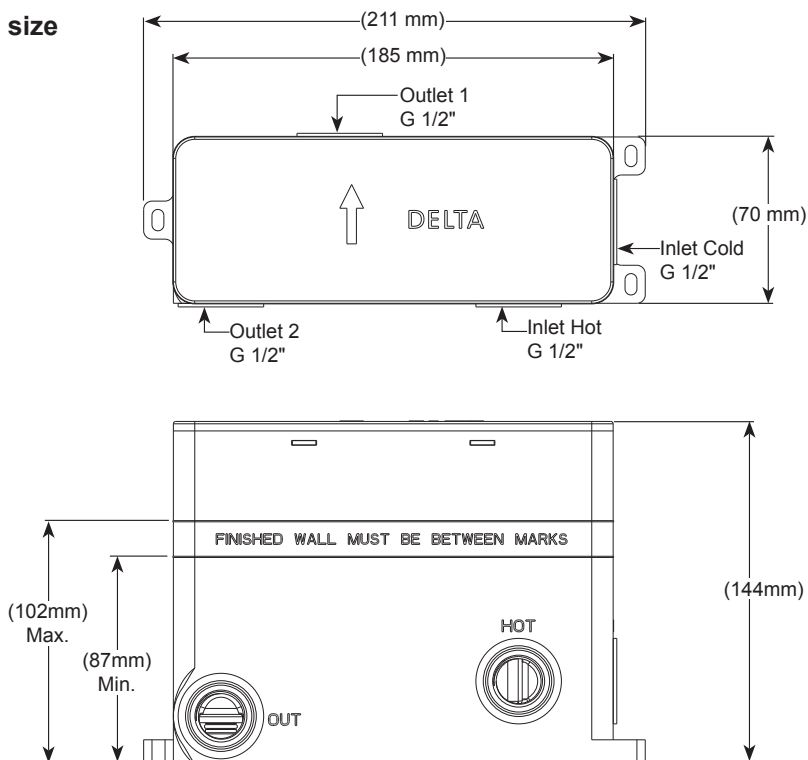


1

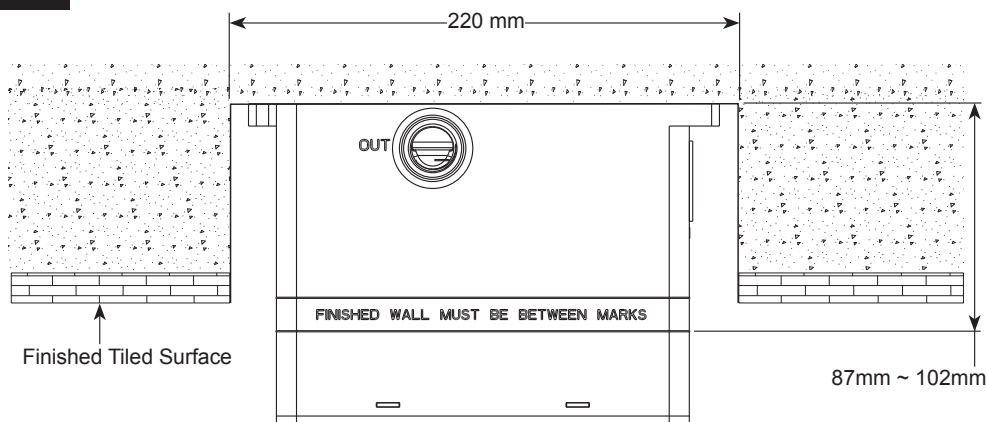

Dig the hole base on the overall size. Notice: FINISHED WALL MUST BE BETWEEN MARKS.


2

Use Levelling meter to make Sure that Rough is level in horizontal and vertical directions

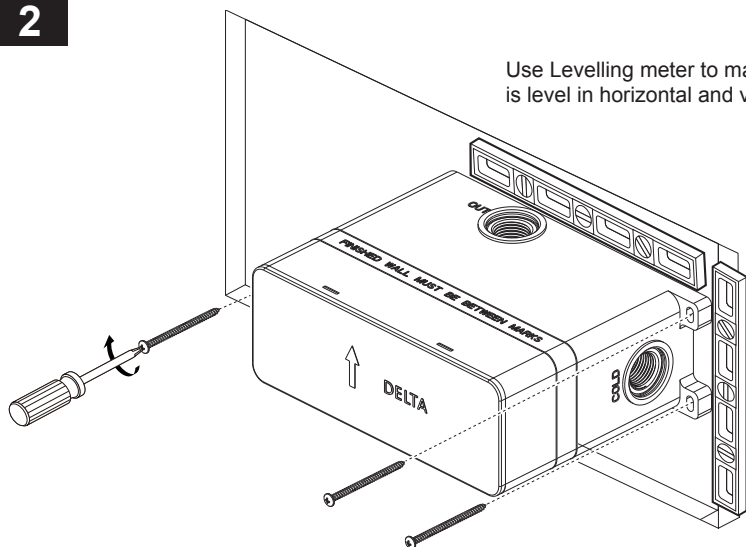


Secure the body against wall with screws. Make sure rough is level in the horizontal and vertical directions.

3

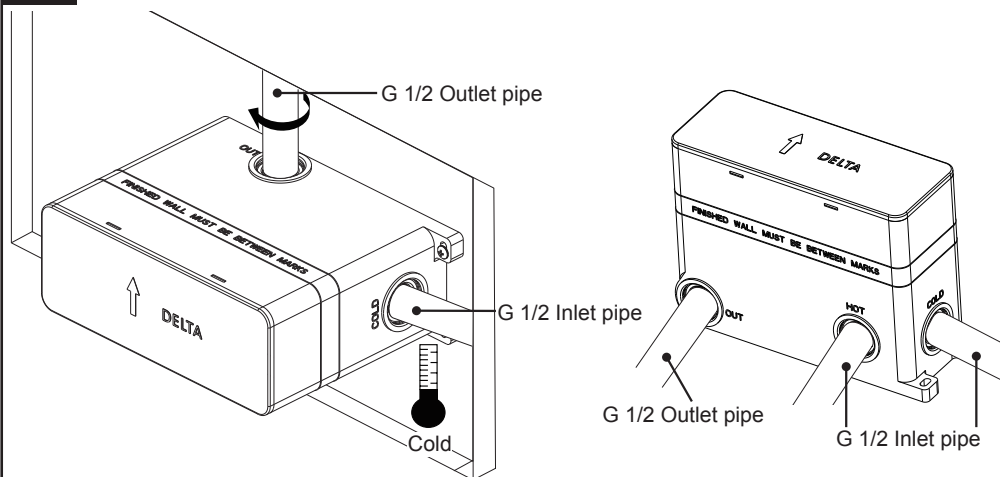


MAKE CONNECTIONS TO WATER LINES.
Install water inlet pipe and water outlet pipe.

4

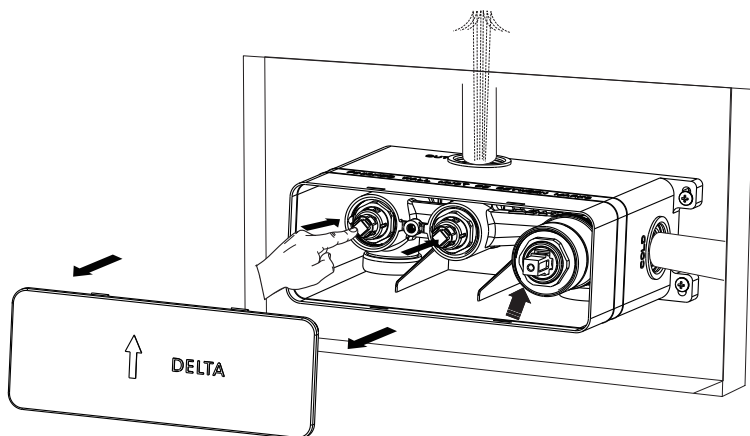


PRESSURE TESTING & FLUSHING. Pull out the protection cover. Open the cartridge, press to check the water.

5

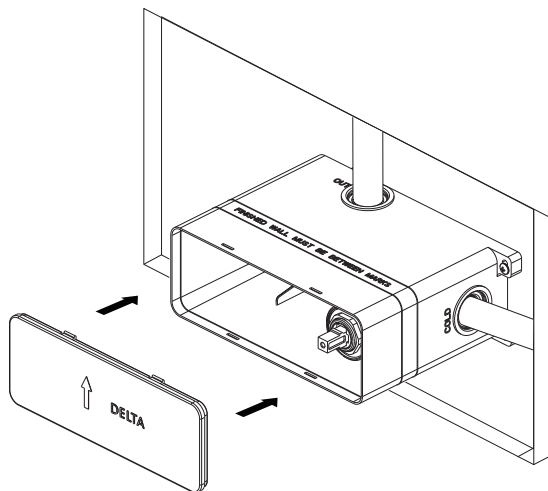

After testing, reinstall protection cover. Note: please make sure all the valves are in close position before re-cover.

6

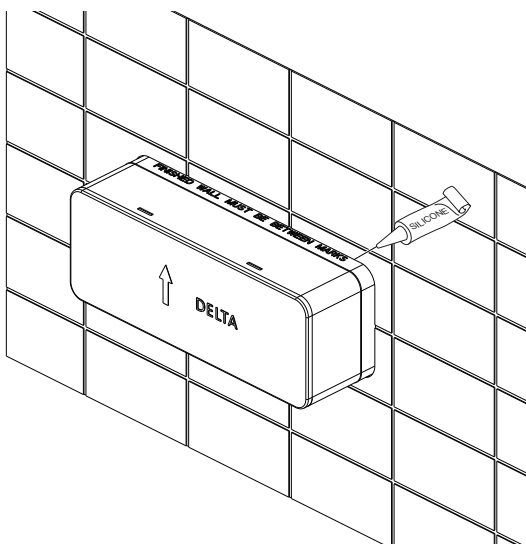

COMPLETE WALL FINISH. Cement filled and tiled.