

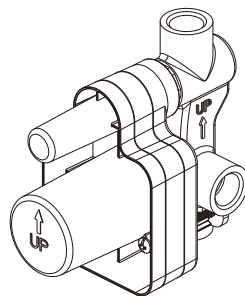


69362

Rough-in with push-button diverter

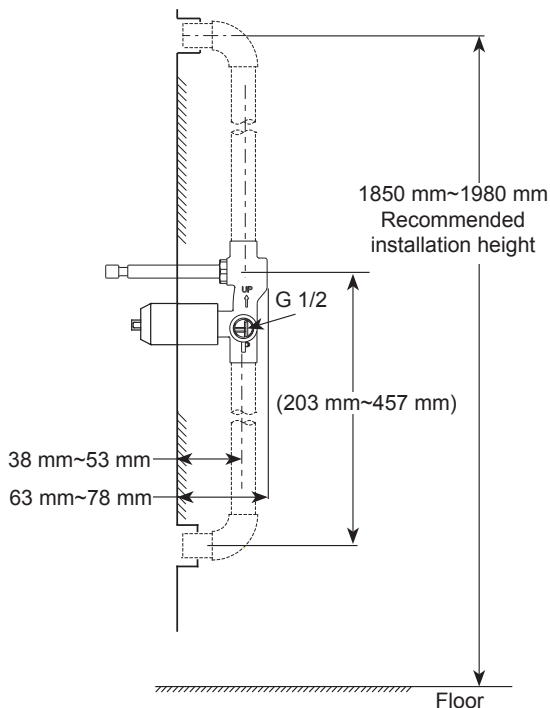
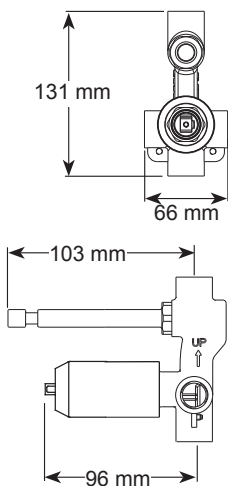
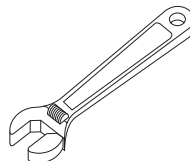
see what Delta can do™

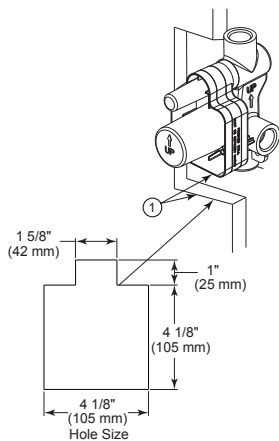
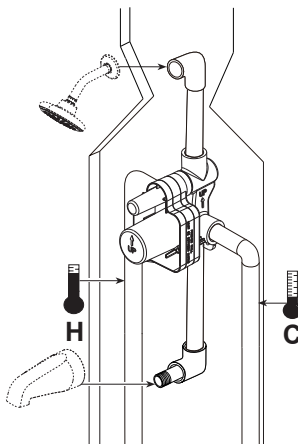
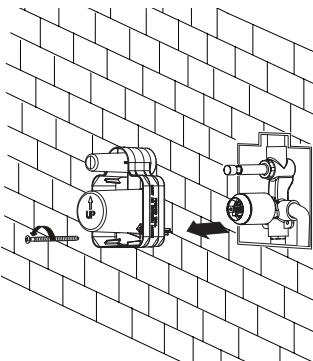
Model
R85300



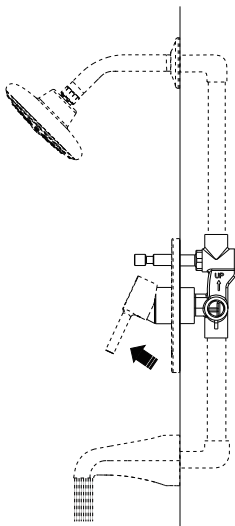
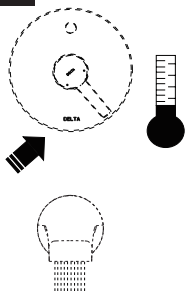
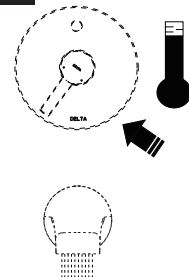
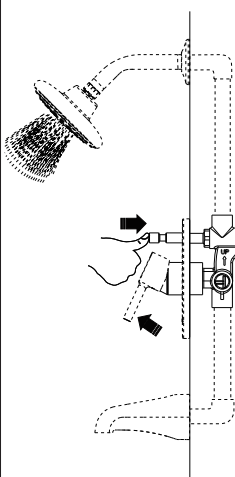
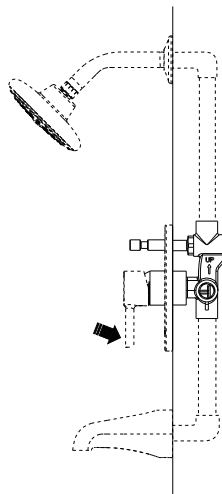
Write purchased model
number here.

You may need:

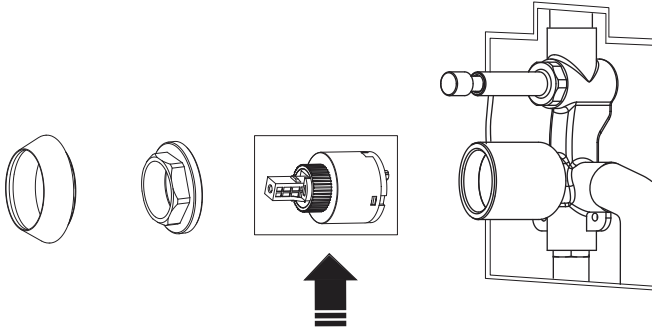


1A**1B****1C**

1. Install valve body and plumbing. Note: Face of plasterguard (1) should be flush with finish wall line.

2A**2B****2C****2D****2E**

2. Check for correct operation for tub and shower.



3. Replace the ceramic cartridge.

