




87335


In-Wall Shower Only

see what Delta can do™







Model
33976

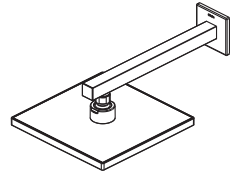


Write purchased model
number here.




You may need:

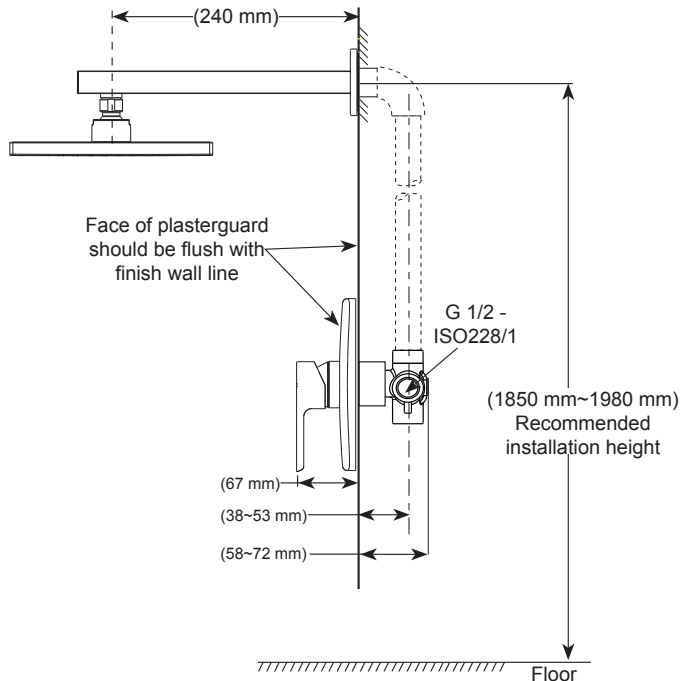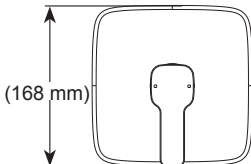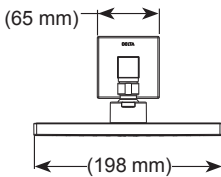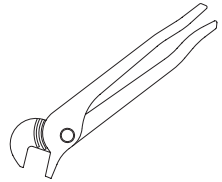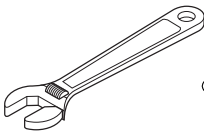

1A

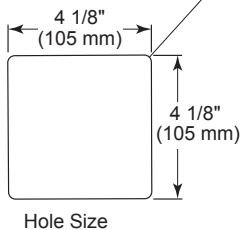


1B

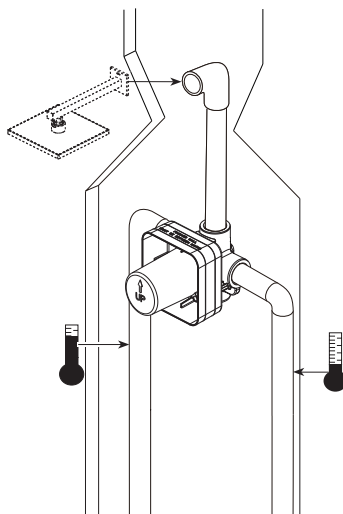


1. Install valve body and plumbing. **Note:** Face of plasterguard (1) should be flush with finish wall line.


2A

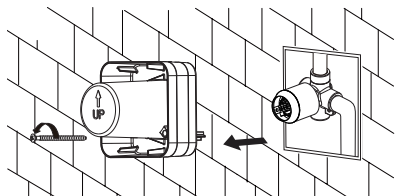


2B

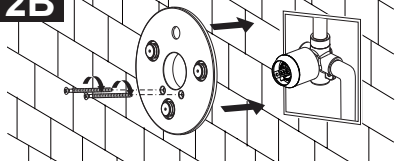




2C

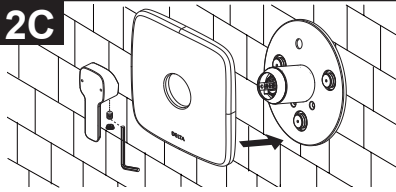


2D

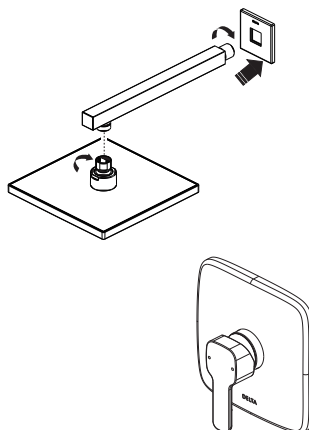

2. Install trim.

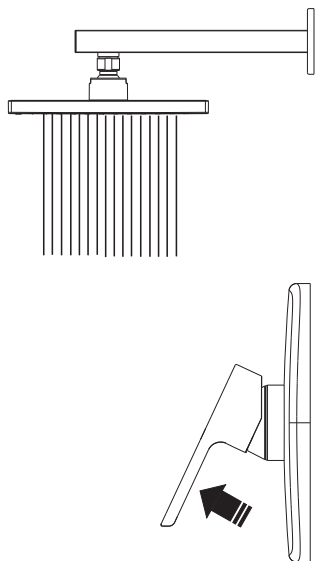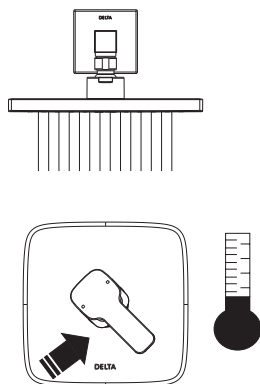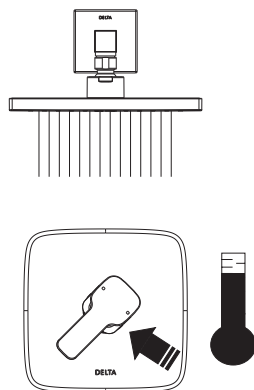3A**3B****3C****3D**

3. Check for correct operation.

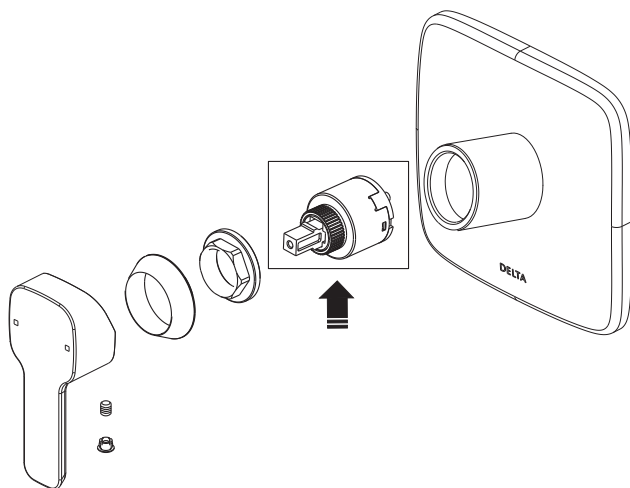

4. Replace the ceramic cartridge.