




87336

In-Wall Tub Shower



see what Delta can do™

Model
33985


Write purchased model
number here.

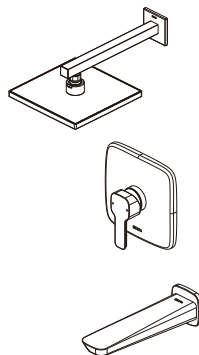


You may need:

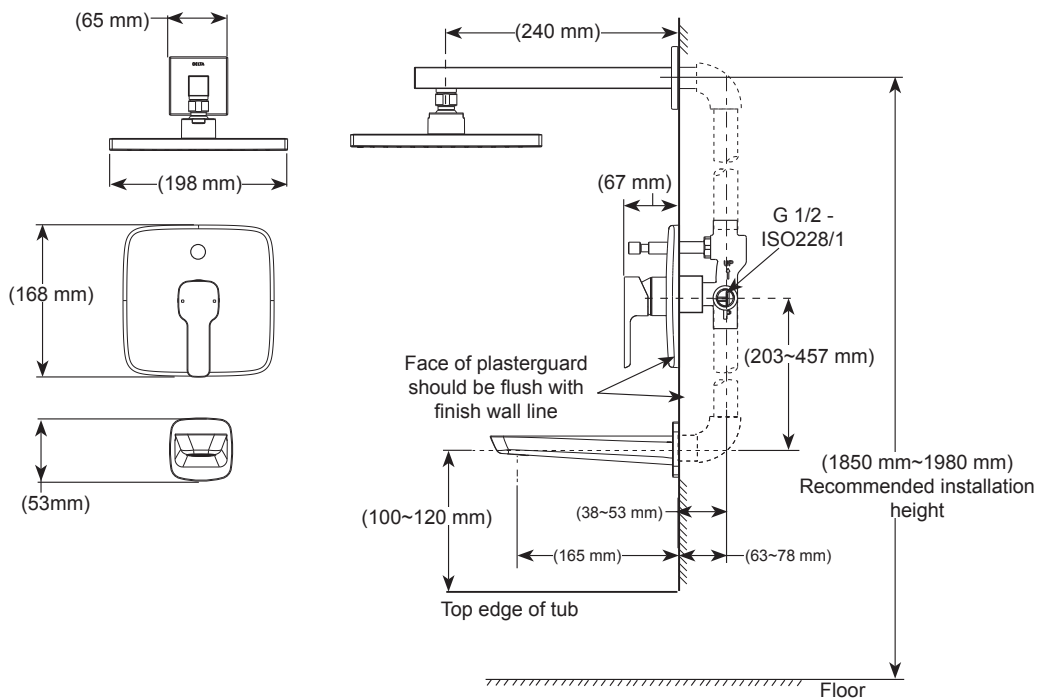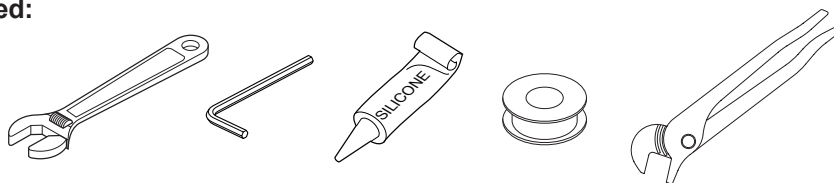

1A

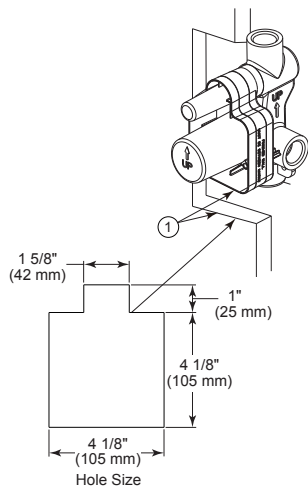


1B

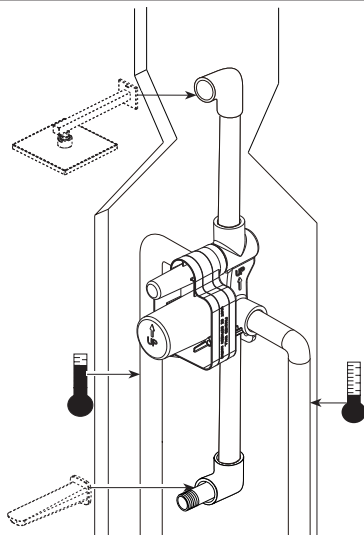


1. Install valve body and plumbing. **Note:** Face of plasterguard (1) should be flush with finish wall line.

2A

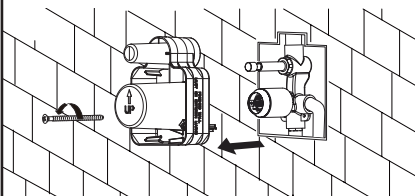


2B

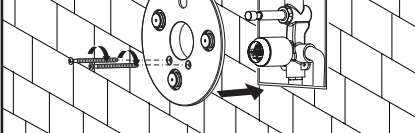


2C








2D

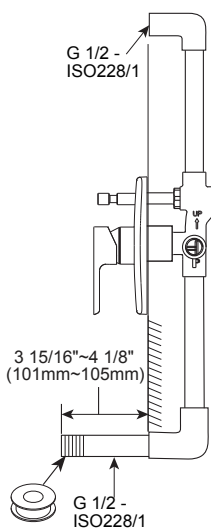


2E

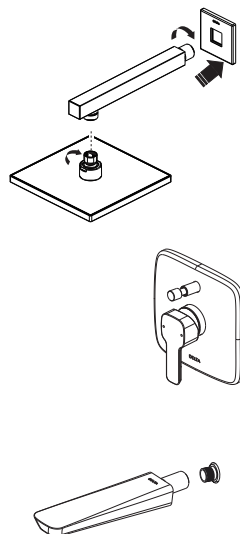

2. Install trim.

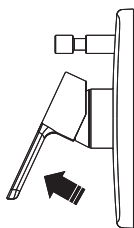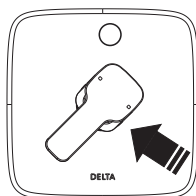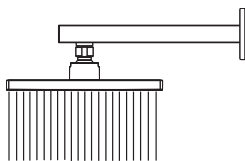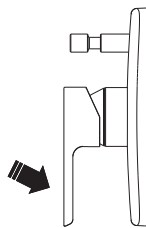3A**3B****3C****3D****3E**

3. Check for correct operation.

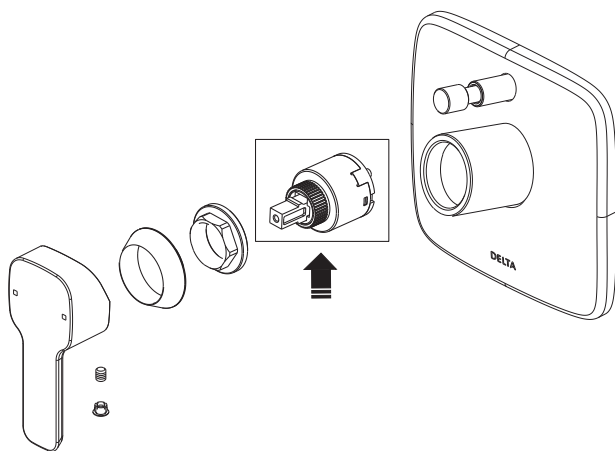

4. Replace the ceramic cartridge.