

CLARIFI™

TANKLESS REVERSE OSMOSIS SYSTEM

USER GUIDE



see what Delta can do™

WATER FILTRATION YOU CAN TRUST.

The Delta® Clarifi™ Tankless Reverse Osmosis System is certified to filter out more than 90 contaminants from your drinking water, including lead, microplastics, chemicals, pharmaceuticals, nitrates, and heavy metals. Tested and certified against NSF International standards, Clarifi™ Tankless Reverse Osmosis is designed for reliable, easy-to-use in-home water filtration.

SCAN TO VIEW



Install Videos



How to Change
the Filters Video



Troubleshooting
Video

FIND VIDEO TUTORIALS AT:

<https://www.youtube.com/@deltafaucet>

YOUR REVERSE OSMOSIS SYSTEM


■ INCLUDED IN THE BOX

■ NOT INCLUDED IN THE BOX


- RO faucet with Air Gap
- RO faucet with Air Gap waste line
- Cold water supply stop
- Standard faucet



CARTRIDGES MAY ROTATE DURING SHIPPING.

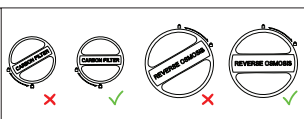

Confirm correct orientation before use.

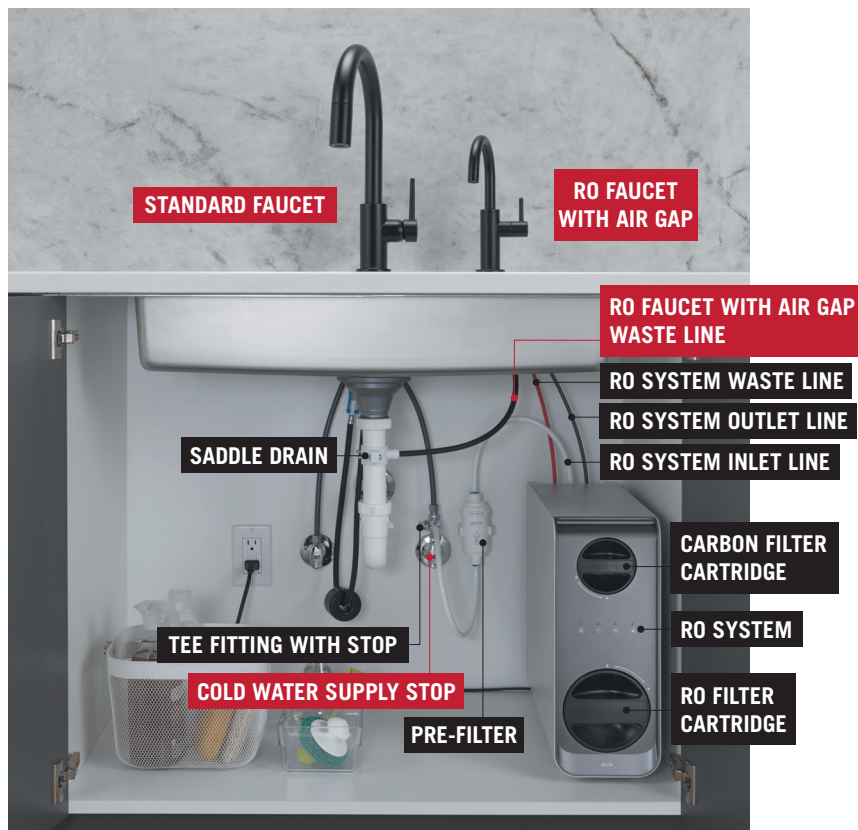

CHANGING THE FILTERS



Reorder
Carbon Filter



CLARIFI™ CARBON FILTER CARTRIDGE

FILTER LIFE:
24 months or
1,320 gallons



Reorder
Reverse
Osmosis
Filter



CLARIFI™ REVERSE OSMOSIS FILTER CARTRIDGE

FILTER LIFE:
24 months or
1,320 gallons

HOW TO REPLACE CARBON FILTER CARTRIDGE AND REVERSE OSMOSIS FILTER CARTRIDGE

- Rotate handle counterclockwise to unlock and pull cartridge out
- Insert new cartridges with handle oriented vertically
- Rotate cartridge clockwise to lock in place
- Handle should be horizontal and flush with front panel when fully installed
- Manually reset each filter life by pressing icon under its indicator light for 5 seconds
- Repeat for each filter
- System will beep once to signal successful reset
- After replacing both cartridges, turn on faucet and manually flush system for 30 minutes to break in new filters



Refer to the installation instructions for more details on replacement, if needed.

HOW TO REPLACE PRE-FILTER

- Turn off water supply from tee fitting
- Turn on Reverse Osmosis faucet
- Unplug power cord while faucet is on
- Turn off faucet
- Disconnect pre-filter by compressing fitting flange while pulling tubing straight out
- Insert new pre-filter using push-to-connect fittings
- Turn on water supply line, plug in power cord and inspect for leaks



Reorder
Pre-filter



CLARIFI™ PRE-FILTER

FILTER LIFE:
6 years or
3,960 gallons



How To
Change Filters

Record installation date for future reference to help maintain replacement schedule.

INDICATORS



WATER INDICATOR

The indicator light will be blue while filtering water. It will turn off when water is not being dispensed.



FILTER LIFE INDICATOR

- Solid Blue: Filter life is normal.
- Solid Purple: Filter life will expire soon.*
- Solid Red: Filter life has expired.*



FILTERED OUTLET WATER QUALITY INDICATOR

- Solid Blue: Low amount of TDS
- Solid Purple: Medium amount of TDS
- Solid Red: High amount of TDS

If an indicator is blinking or flashing, consult the user manual for troubleshooting tips.

SOUND

The unit will **beep twice** per use when the filter is nearing end of life.* It will **beep constantly** during use once the filter is exhausted. Your unit will make sound as it runs or purges (flushing cycle), similar to that of a dishwasher.

*We recommend to order replacements at this time.



ADD TO YOUR SYSTEM (SEPARATE PURCHASE)

CLARIFI™ REMINERALIZER CARTRIDGE

While the Clarifi™ Tankless Reverse Osmosis System removes contaminants from your drinking water, it also removes the naturally occurring minerals that give water its refreshing, crisp taste*. The remineralizer cartridge adds those good-for-you minerals, like calcium and magnesium, back into your filtered drinking water.

*Taste is subjective and some may prefer their water without this optional feature.

<https://www.deltafaucet.com/remineralizer>



WATER QUALITY FOR YOUR SHOWER (SEPARATE PURCHASE)

CLARIFI™ SHOWER FILTER ATTACHMENT

Instantly upgrade your shower with the easy-to-install Delta® Clarifi™ Shower Filter Attachment, and reduce chlorine and sediment in your shower water.

<https://www.deltafaucet.com/shower-filters>



REGISTER YOUR PRODUCT HERE:

<https://www.deltafaucet.com/service-parts/product-registration>

For live customer support: 800-345-3358



see what Delta can do™

115976 10/25

CLARIFI™

2-STAGE UNDER SINK ADVANCED
WATER FILTRATION SYSTEM

USER GUIDE



see what Delta can do™

FILTERED WATER MADE EASY.

The Delta® Two-Stage Under Sink Advanced Water Filtration Systems are tested and certified against NSF international standards to improve your in-home water quality.

Designed for reliable, easy-to-use in-home filtration, the digital display monitors and reports filter and battery life. Filter changes are quick and easy with cartridges that install with a simple twist and lock mechanism and don't require water to be shut off.

SCAN TO VIEW VIDEO TUTORIALS



Watch an install video with step-by-step help from Delta pros.



And, learn how to change both your filters.

OR, VISIT [YOUTUBE.COM/@DELTAFAUCET](https://www.youtube.com/@deltafaucet)

YOUR WATER FILTRATION SYSTEM

■ INCLUDED IN THE BOX

- Manifold
- Sediment Filter Cartridge
- Advanced Carbon Filter Cartridge
- Tee adapter
- 1/4" push connect elbow
- Battery box (includes 3AA)
- Hoses

■ NOT INCLUDED IN THE BOX

- Standard faucet
- Beverage faucet
- Cold water supply stop



FILTER AND BATTERY REPLACEMENT

HOW TO REPLACE BOTH FILTERS

- Twist and turn the Sediment Filter on the system clockwise to remove the used filter.
- Remove protection cap on the new replacement Sediment Filter. On the label, it will be marked with ①.
- Match it with ① on the system manifold.
- Twist the new Sediment Filter counter clockwise to install.
- Repeat same steps to remove and install the new Advanced Carbon Filter. On the label, it will be marked with ②.
- After both filters have been replaced, reset the filter life following instructions on next page.
- Then, turn on the beverage faucet and manually flush the system for 10 minutes to purge the new filters.

HOW TO CHANGE THE BATTERIES

- Remove the battery compartment from the cabinet and unplug from the unit.
- Lift up the tabs to open compartment and replace with new batteries (3AA).
- Insert battery pack cable back into the manifold. Confirm display screen is on and working.
- When the batteries reach below 10% capacity, the battery icon will blink and the unit will beep. The display screen will activate and turn off after 10 seconds.





REFER TO THE MANUAL FOR MORE DETAILS ON INSTALLING THE UNIT

ORDER THE CLARIFI™ SEDIMENT AND CARBON REPLACEMENT FILTERS

2-Stage Under Sink Advanced Water Filtration System — DWQ300700



LED DIGITAL DISPLAY

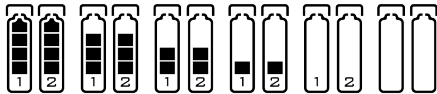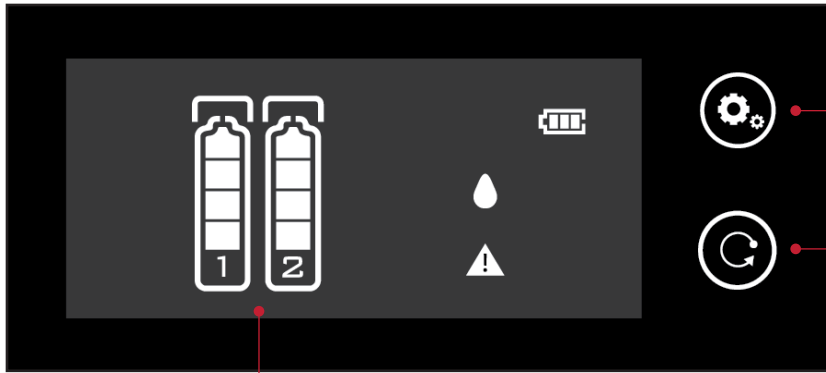

FILTER LIFE

The filter icons will reflect its capacity: 100%, 75%, 50%, 25%, 5% and 0%.

Sediment Filter life: 1 year or 1,100 gallons (whichever comes first)

Advanced Carbon Filter life: 1 year or 1,100 gallons (whichever comes first)



BATTERY LIFE



POTABLE WATER



REPLACE FILTER

SETTINGS

After installing new filters, push and hold the settings button for 3 seconds. Filter 1 icon will blink. You are now in Settings Mode, continue to reset instructions.

RESET

Push and hold the reset button for 3 seconds and the icon will reset to full capacity.

Return to settings button to navigate to Filter 2 icon, then repeat reset instructions.

Push the settings button to exit the reset mode.

When finished replacing both filters, turn on the faucet, and manually flush the system for 10 minutes to break in the new filters.

AUDIBLE ALERTS

When below a 5% capacity, the filter icon will blink. The unit will buzz every 6 seconds when the water is flowing.

At 0% filter capacity, the icon will blink and the unit will beep consistently.

TRACK YOUR FILTER MAINTENANCE

FILTER NAME	DATE CHANGED

FILTER NAME	DATE CHANGED



SCAN TO REGISTER YOUR PRODUCT

When you register your product you'll receive convenient customer service, helpful content and more. Or, visit DeltaFaucet.com/register.

For live customer support:
800-345-3358



see what Delta can do™

117767 03/25